
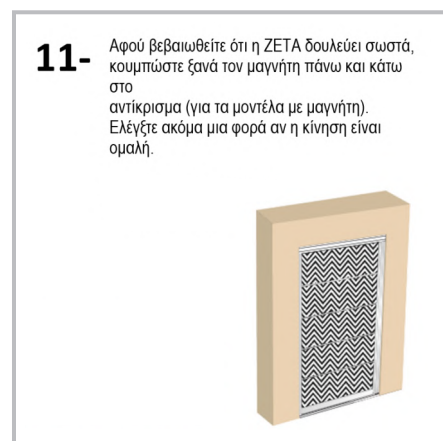
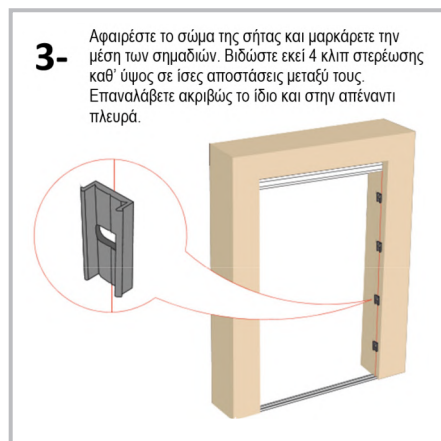



ZETA 28

Οδηγίες Τοποθέτησης

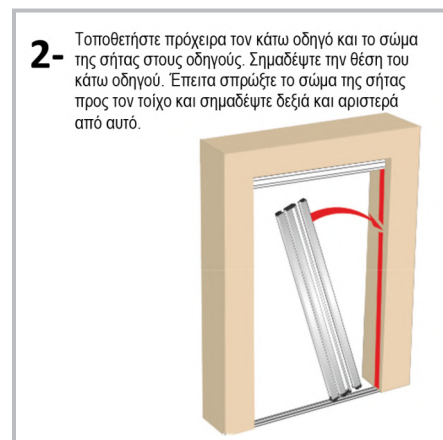


ZETA 28

Installation Instructions

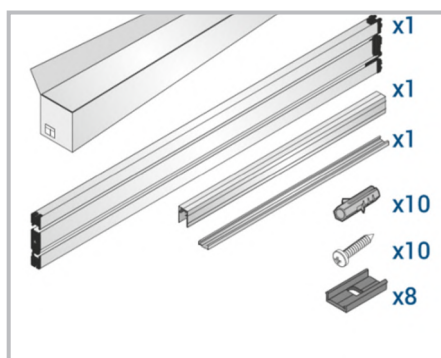


Package contains screen with upper and lower track, a bag with 8 fastening clips and 10 screws with caps.


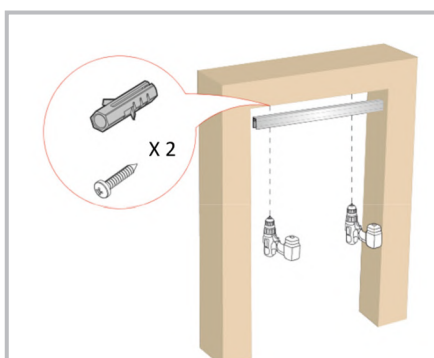


1- Fasten the upper track using 2 screws with caps.


2- Put the lower track on the floor and place the body of the screen on the tracks. Mark the position of the lower track. Next place the screen to the wall and mark its position from both left and right side.

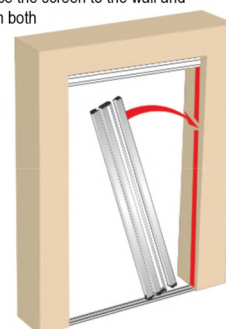

3- Remove the screen and mark the middle between the left and right side marks. On the middle mark, place using screws with caps 4 fastening clips in equal distances between to cover all screen height. Repeat the same on the opposite side of the screen.

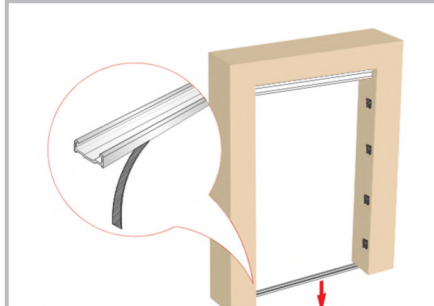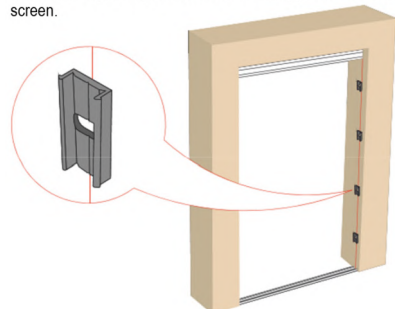


4- Clean and wipe carefully the floor so that there is no moisture. Stick the lower track on the floor using the double-sided tape. The lower track must be on the same line with the upper track.

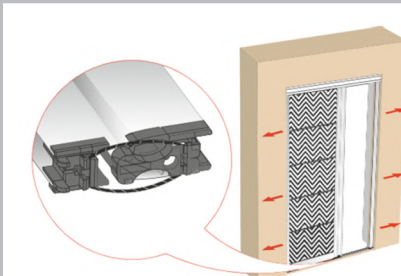


5- Check that the cords are fastened on the sides of the lower caps and that they are not tangled. Fasten the screen on the clips in each side.

9- CORD REGULATION

Using an Allen tool unfasten the top regulator and pull it downwards to stretch the cords and regulate them correctly. Allow the regulator to return to the point where the spring pull is relieved and then loosen again approximately 2-3mm and fasten the regulator. Repeat the same procedure with the bottom regulator. Make sure that during the procedure the handle bar is vertical.

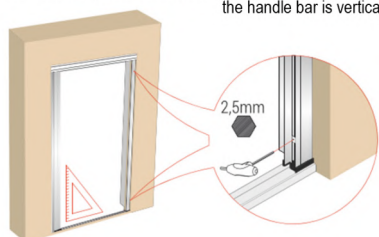

10- FINAL CHECK

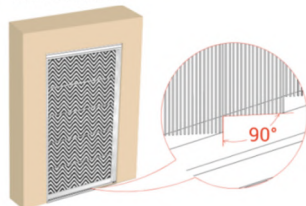

Open and close the screen a few times. If the handle movement is tight repeat the regulation (Step 9). When the handle is fastened to the facing profile, the cords must be balanced and slightly loose. The folds of the pleated mesh must have a maximum angle of 90° between them.

11- With the ZETA screen working properly fasten the magnet on the facing profile (for screen with magnet). Open and close the screen once more to check the proper operation of the screen. ZETA screen is ready for use.

